



PREPARING THE TREATMENT

 
1 Selecting the dosage

From the Menu Distribution, hold down to access the dosage setting function.




2 Tank Filling

From the Menu Distribution, press to select the value to be set.



3 Selecting the field

 From the Menu Distribution, press to select the value to be set.



Reset ?
Field data

OK


Press to reset the data.

ESC

Press to exit without resetting the data.


USE

1 Automatic treatment control

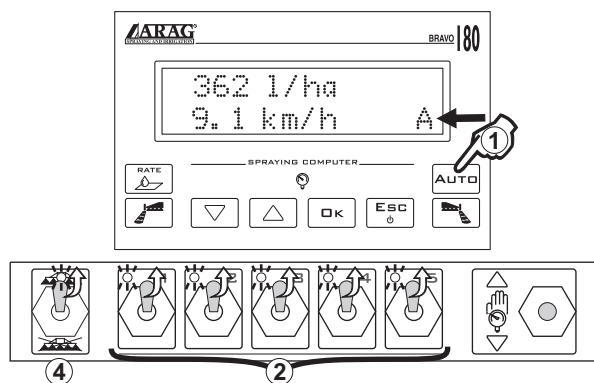

- ① Press to enable automatic mode.
- ② Turn on the section valves required.
- ③ Drive to the start of the field.
- ④ Set the main control switch up.
- ⑤ Run the treatment.

2 Temporary variation in rate

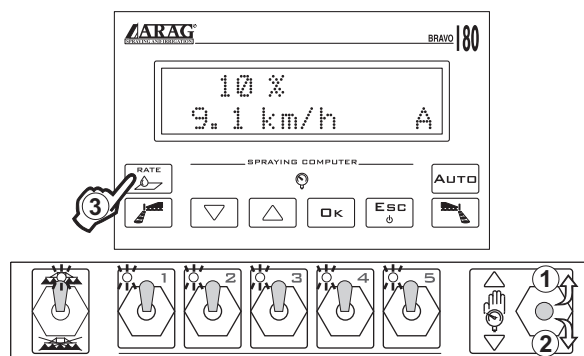

- ① Press the switch up to increase the delivery value.
- ② Press the switch down to decrease the delivery value.
- ③ Press to reset the rate variation percentage.

OPERATING ALARMS

0 l/ha ?
0.0 km/h A

• The computer is not receiving the speed of the tractor and spraying is enabled (main control switch "ON").

0 l/ha ?
Flow rate A

0 l/ha ?
0.0 l/min A



• Flow rate too low to allow delivery of the set amount of liquid (the messages shown flash alternating).

560 l/ha ?
Accelerate! A

210 l/ha ?
Slow down! A

• Speed too high or low for the set dosage.

KEY TO ITEMS ON DISPLAY

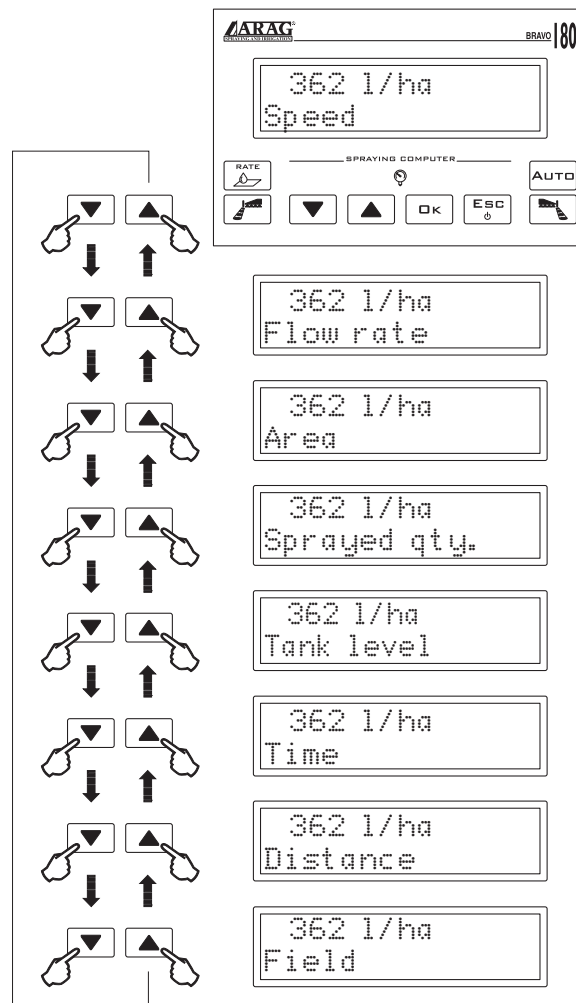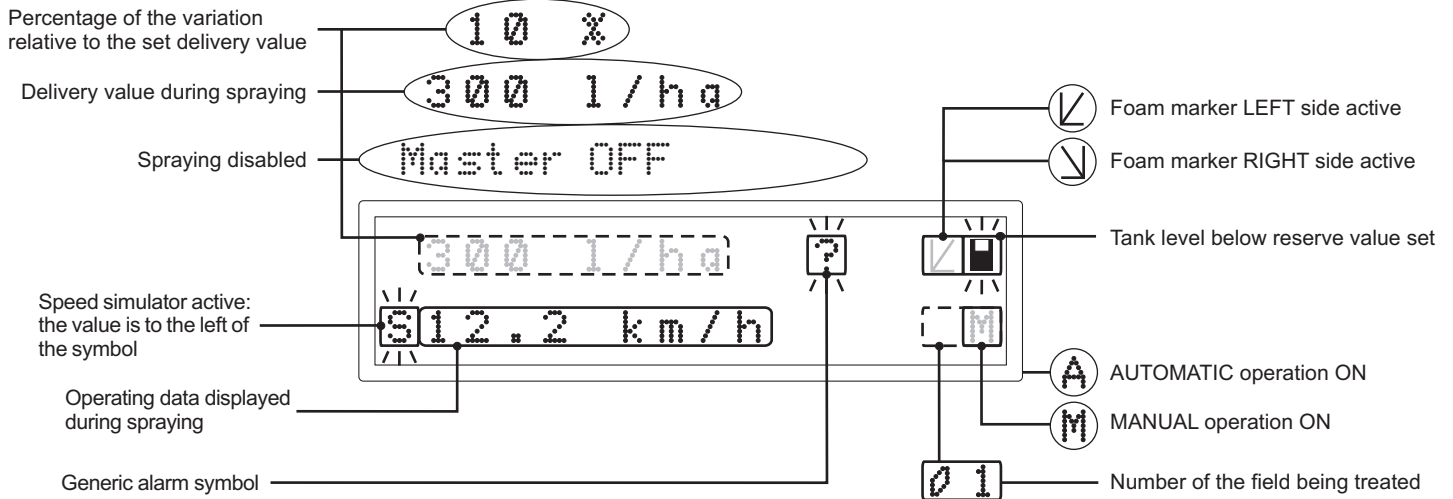

SELECTING THE WHEEL TYPE (CONSTANT)

